

Luxury Vinyl Series | Dryback Vinyl Series

Pre-installation	Instructions	2

Installation Instructions 8

Care and Maintenance 12

Product Warranty 14







#### Responsibility of Homeowners and Installers:

- It is highly recommended that all installers read through installation instructions before proceeding with the installation.
- A visual inspection of different boards by opening several product boxes with the homeowner or project management is highly recommended before commencing installation.
- Do not proceed with the installation if not satisfied with color or quality. Once the product has been installed, it is considered to be accepted by customers. It is the responsibility of the installers to communicate with the homeowner during this entire inspection process.
- All EC Premium AquaFix products are manufactured to meet practical industry standards with a
  maximum of 5% defects as milling tolerance. Throughout the entire installation, any pieces of flooring that appear to contain a manufacturing defect should not be installed.
- It is the responsibility of the installer and homeowner to ensure all job site condition requirements are reached before commencing installation. Manufacture takes no responsibility for defects caused by improper job site preparation and installation procedures.

Do not install any defective or unsatisfactory planks. EC Premium - AquaFix accepts no responsibility for any cost's related to the installation of an unsatisfactory product.

#### Part 1 Pre-installation

#### A: INSTALLATION TOOLS



Saw

/



Mallet



Table Saw



Vinyl Cutter



Spacer



Weight Roller



Grinder



Leveler



Broom



Cutter



Measure Tape



Tapping Block



Sliding T-bevel Gauge



Square Gauge Ruler



Moisture Meter




Trowel





#### **B: STORAGE**

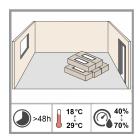

#### Delivery

- Please do not deliver flooring to the job site if the job site's climate conditions have not been met, as described in section E.
- During transportation, all packages must be well protected from the weather.
- Always transport Aquafix Vinyl in a flat position.

#### Storage before installation

- Panels should be stored unopened in the middle of the room at a room temperature of 18°C-29°C and relative humidity of 40%-70% for min. 48 hours.
- Never store boxes on their sides or ends.
- Avoid direct sunlight exposure.

#### C: APPLICATION



- EC Premium AquaFix products are intended for **indoor use** as flooring cover only.
- · Apply on, above, or below grade
- Commercial application:
  - Full spread glue down installation method must be performed
  - See details of adhesive required in Section O
- Residential application:
  - For light traffic areas, where the room length is no longer than 15' in any direction, the product can be installed with a combination of perimeter glue down and loose lay with bonded grip pattern; see details in Part 2 Installation.
  - Full spread glue down must be performed for high traffic or intense use areas.

#### D: SUBFLOOR CONDITIONS

#### Subfloors & pre-existing flooring


- o AquaFix vinyl products can be installed over concrete, OSB, plywood.
- For radiant heating systems, see details in section G.
- o If installing over pre-existing hard surface flooring, ensure the entire layer of pre-existing flooring is fully adhered to the subfloor structure.
- Carpet, carpet tile, or any cushioning material is not approved as pre-existing hard surface flooring.
- When installing over tile or marble, all grout lines, cracks, and gaps must be filled with patching compound up to a smooth level; wait until compounds are completely dry and fully adhered to the substrate. Primer might be needed to ensure a strong bond.









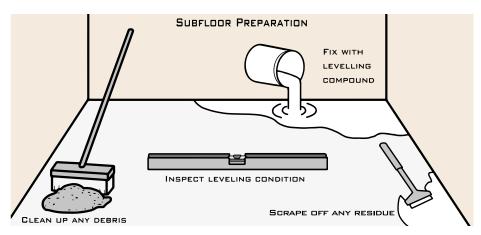

#### Evenness

The subfloor must be levelled within the following parameters:

- o Maximum +/- 0.1" per 6.6' (2.5mm per 2m) radius span.
- o Maximum +/- 3/16" per 10' (4.7mm per 3m) radius span.
- Grind down any irregularities and fill any uneven spots with the NWFA approved leveling compound.
- No crack is allowed throughout the entire substrate.
- o Maximum deflection should be no more than 1.1mm (3/64").

#### Cleanliness

The subfloor must be cleaned before installing all types of AquaFix vinyl flooring and free of any debris or microorganisms.

#### The below subfloor conditions must be met before performing installation:

#### Installation on concrete:

- Compressive strength rated 3500 psi or higher.
- The moisture vapor emission rate should not exceed 2.27kg/92.9 sqm (5 lb/1000 sq. ft) per 24 hours, as per ASTM F1869.
- ASTM F2170 test method can also be used; internal relative humidity must be below 80%, and pH value between 7 and 9.
- Before installation, the entire concrete substrate must be completely cured and dry for at least 60 days.

#### Installation on wooden subfloors:

- Plywood subfloor moisture content must not exceed 12%, and the variance in moisture content between the subfloor and the flooring panels must not exceed 3.5%.
- In Canada, it is required to use a minimum of 5/8" tongue and groove (T&G) plywood or 3/4" T&G OSB for subflooring.
- The subfloor panels must be securely attached to the joists, free of squeaks, bounces, with maximum deflection of 1.1mm or 3/64".













#### E: TEMPERATURE AND MOISTURE CONDITIONS



- It is also essential that the flooring material is in the same temperature range as the installation site. As described below, do not deliver flooring to job sites if climate conditions have not been met.
- Allow the flooring to acclimate at the climate-controlled job site for a minimum of **48 hours** when the desired climate range has been met.
- The room temperature should be 18°C (65°F) 29°C (85°F). With ambiance-air relative humidity is between 40%-70%. These environmental conditions must be maintained for the life of the product (before, during, and after the installation).
- HVAC system must be fully operating in all areas.


#### F: SPACE FOR EXPANSION & MAXIMUM SIZE WITHOUT EXPANSION GAP

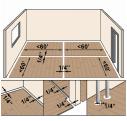





During installation, leave a 3/8" (or 1/2" for rooms over 2000sf) expansion space around the entire perimeter of the floor between the flooring and the walls and all vertical/fixed objects (e.g., door structures, fireplace, tiles, cabinets, kitchen island, and so on). Undercutting vertical structures might be an option by ensuring no damage to the structural function of the objects.

#### G: INSTALLATION OVER A RADIANT HEAT SYSTEM





- AquaFix Luxury Vinyl Series can be installed over the hydronic and electric radiant heat system. Both hydronic pipes and heating wires must be embedded and isolated with a minimum of 3/8" (9.5mm) thick concrete or plywood.
- Ensure that the system is in complete working order and has been thoroughly tested and running for a minimum of two weeks before installation.
   The system should be turned off 24 hours before installation in the install zone.
- During installation, the temperature should maintain at 18°C (65°F) 29°C (85°F). Never allow the surface temperature of flooring to go above 29°C (85°F).
- In increments, constantly adjust the temperature control from 4°C to 6°C gradually. Any dramatic temperature will cause damage to flooring.
- AquaFix 2.5mm Dryback Vinyl Series is not suitable for installation over hydronic or electrical heat systems.











#### **H: PRODUCT INSPECTION**

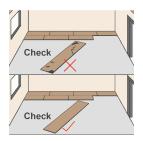

When racking, inspect all boards for visible manufacturing defects. Under the product warranty terms, the dealer may replace boards with manufacturing defects in excess of industry standards (5% of total quantity). Once installed, boards will be considered accepted by the homeowner, even if the homeowner is not present during installation. Supplier accepts no responsibility for problems arising from this improper handling.

#### I: PANEL MIXING

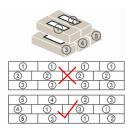

- Prepare at least four flooring packs and mix panels from different boxes during installation.
- We recommend the alternate fitting of the panels from four different packs simultaneously.
- Keep alternating the panels across the entire floor area. It guarantees the best possible appearance of your flooring product.

#### J: USE OF MASKING TAPES





3M Scotch Blue Tape


Only 3M scotch blue tape is allowed for all installation methods.


#### **K: STAGGER PATTERNS**

- Stagger short end (butt joints) with a minimum of 15.75" (40cm) for the adjacent two rows.
- Avoid using boards less than 10" (25.4cm).
- · Avoid 'H' style, stair-step style in any adjacent rows.











#### L: LAYING DIRECTION



- The recommended installation direction is lengthwise to the primary light source.
- The joints are more visible crosswise than lengthwise to the light source.
- It is only a recommendation because there are also other influences.
- Avoid placing short-end joints over seams of the wooden subfloor.
- The laying direction to be perpendicular to the subfloor joists is recommended.









#### M: UNDERLAYMENT REQUIREMENT & LAYING

#### Wooden Panel Underlayment:

The moisture content should not exceed 15%.

All panels must be smooth, free of dust, silicone, grease, or any other substances that may hinder proper bonding strength to the subfloor and new flooring covering.

All panels must have a minimum thickness of  $\frac{1}{4}$ " (6mm) and should be securely fastened using nails, fasteners, or subfloor adhesive, ensuring minimal structural deflection (no more than 1.1mm or  $\frac{3}{64}$ ").

#### Acoustical Underlayment:

The use of acoustical underlayments is strongly NOT RECOMMENDED for both the Dry Back and Luxury Vinyl series products.

Depressions resulting from heavy static or dynamic loads/weights can lead to uneven flatness between flooring planks.

#### N: TRANSITION MOULDING

• Please find your flooring products and download the coordinating transitions' profile image and installation guidance from www.ecpremiumflooring.com.

#### O: ADHESIVE

Commercial Applications:

- Full spread glue down is required for all commercial applications.
- For high traffic or intense use in commercial areas (shopping mall, hallway, restaurant, etc.), permanent firm setting adhesive is required.
- For light commercial areas (hotel room, conference room, etc.), transitional pressure-sensitive adhesive or permanent firm setting types are acceptable.
- Adhesive recommendations:
  - o Firm setting: XL Brand Stix 5800.
  - o Transitional pressure-sensitive: Mapei 360, XL Brand Stix 2230.
  - Follow the adhesive manufacturer's instructions throughout the entire process.

#### P: BOND TEST

- 72 hour bond test must be performed before installation.
- Ensure all subfloor conditions are met (refer to section D).
- No Asbestos allowed.










#### Part 2 Installation - GLUE DOWN INSTALLATION

(For 5mm Luxury Vinyl Series products: mandatory for all commercial applications, and recommended for residential applications)


(For 2 5mm Daylock Vinyl Co. 1

(For 2.5mm Dryback Vinyl Series products: mandatory for both commercial and residential applications.)

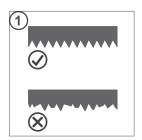


#### Trowel used:

- Use a metal trowel only.
- Use trowel styles recommended by adhesive manufacturers
- Replace any trowel that has worn teeth.
- \*\*Only professional hardwood flooring installers should be performing glue-down installations.

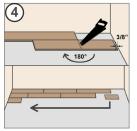


Lay down the first row of boards along the chalk line and continue with the second row of boards.

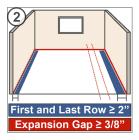


#### Starting your installation


Chose a starter point to set the starting row. (Refer to Part 1 - section K for laying direction guidance.) The main exterior wall should be used as a reference wall to start.

Set two chalk line reference points by measuring the same distance from each end of the reference wall, then snap your chalk line. Distance between the two chalk lines should equal the width of two planks.

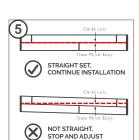

After the first two rows of boards are set, the alignment procedure must be done using a straight laser line or chalk line to ensure the starting rows are perfectly straight and parallel to the reference wall.

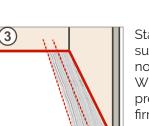




Start spreading adhesive to the subfloor along the chalk line but not to cover it.


Whether the job uses transitional pressure-sensitive or permanent firm set type of adhesive, always read and follow the adhesive manufacturer's instructions.

For areas where quick boards replacement might desire, pressure-sensitive type adhesive is preferable, be aware of the adhesive's open time, and follow their manufacturer's wait time before laying planks.


For areas with high traffic and intense loads/usage, the permanent firm set wet lay adhesive is mandatory.

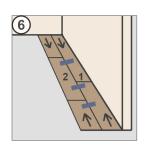

Then use approved adhesive tapes (3M scotch blue) to secure the joints of the boards and place the starting rows.

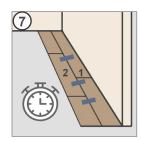


According to the adhesive manufacturer's recommendations, it is recommended to leave the first two starting rows enough cure time and get the adhesive fully cured before continuing to the next row.







### \*AQÜAFİX®

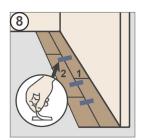


Remove adhesive tapes within 24 hours and peel off tape in a 45 degrees slow manner.




Always have your adhesive remover and damp dry cloth ready. Any excess adhesive left on the flooring surface or hands of the installer must be removed with the proper solvent recommended by the adhesive manufacturer.

Do not use the following products to remove adhesive on your floors:


- detergent:
- solvent-based polishes;
- soaps;
- citrus-based cleaner.

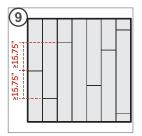

As installation continues, when placing the second row and every subsequent row, make sure to stagger the end joints a minimum of 15.75" (40 cm) apart from the previous row. (refer to Part 1, section K)

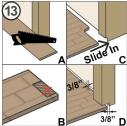


Maintain proper expansion space (refer to Part 1, section F).



Installation towards door frames

Lay a panel next to the door frame (with the patterned side facing downwards) and cut into the door frame with the straight backsaw. Then slide the panel under the frame with the patterned side upwards. Don't forget to allow for freedom of movement here to 3/8" (10 mm).

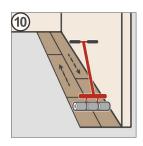


Using a weighted floor roller, ensure that every plank is pressed and firmly attached to the adhesive. The rolling action will also remove any trapped air between the floor and substrate.



Avoid working directly on top of newly installed areas.



Wait for a minimum of 24 hours before moving furniture onto the floor.








## Part 2 Installation - LOOSE LAYING WITH PERIMETER & GRID GLUE ASSISTANT SINSTALLATION (\*\*ONLY APPROVED FOR 5MM LUXURY VINYL SERIES)


Residential applications only, for rooms less than 15' (4.572m) in any direction. Full spread glue down is required if over 15' (4.572m) in any direction.

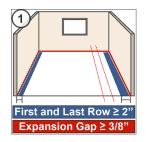


Chose a starter point to set the starting row. The main exterior wall should be used as a reference wall to start. (Refer to Part 1 – section L for laying direction guidance.)




A center grid pattern glue assistance is mandatory. A strip of 10-12" (25-30 cm) applies in both directions in the middle of the room.

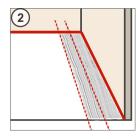

Start the first two rows with similar steps as full-spread glue-down procedures.

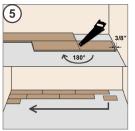

Continue installing the adjacent rows with the loose laying method.



Trowels adhesive the entire perimeter of the room with a 10-12" (25-30 cm) band of pressure-sensitive adhesive.



Follow the staggering rules, expansion gap rules, and use a weighted roller in all areas.



Adhesive should be used in areas as below:

- Areas with intense usage, e.g., heavy loads, use of wheelchairs, hallways, and stair landings.
- Areas with potential movements of heavy objects.
   (e.g., besides fridge, dishwasher, piano)
- Areas with potential sunlight exposure.
- Areas with potential excessive heat. (e.g.underneath a baseboard heater)



0
0
- 1
3
$\sim$

NOTES:









#### Part 3 Care and Maintenance

#### A: CLEANING

- Under no circumstances should the floor be soaked with liquid. LVP flooring is waterproof itself; excessive moisture will grow microorganisms, which will cause damage to the flooring's structure.
- · Sweep the floor regularly to keep it free of dust, grit, and other abrasive materials.
- Sweep the floor with a damp cloth along with the recommended cleaner. (e.g., Bona vinyl cleaner) Apply cleanser to the cloth, not directly on the floor.
- Hardened glue-residue can be removed with acetone or a special glue solvent, or may use usual household cleaners; please avoid scouring agents, wax, polish, and bleach.
- For regular cleaning and preservation, we recommend Bona Vinyl Flooring Cleaner. Larger soiling
  and persistent stains like color, glue, nail varnish, or oil can easily be removed using acetone or other alcohol-containing solvents. (Must be approved to be used for vinyl flooring according to NWFA
  guidelines.)
- If a vacuum is used, make sure a soft texture nozzle is attached to avoid scratch marks being left on the surface.

#### **B: PROTECTION**

- To prevent damage from heavy static loads, such as hospital beds, pianos, fridges, or heavy dynamic (rolling) loads, it is recommended to use devices and rollers/casters that distribute weight loads evenly. The furniture, appliance, or equipment manufacturer holds the responsibility to ensure the suitability of their devices and equipment, including any potential damage that may occur to the flooring due to their use.
- All AquaFix vinyl flooring must be protected from direct sunlight exposure. UV
  protective film, blinds, or curtains must be used in all windows that provide
  direct sunlight to ensure that the products are not overheated.
- Use a heavy-duty floor protection membrane (e.g., Floor Guard with heavy-duty floor protection) to cover all areas until no other contractors work within the job site.
- Avoid taping the protection membrane directly to the floor's surface by overlapping each run of the membrane while taping different runs together.
- Tape the end run of the membrane along the baseboard or shoe base with extremely low adhesive tape.
- An extra layer of plywood, MDF board, might be used along the hallway or high traffic areas where furniture and appliances will be transferred into the premises.
- Putting felt pads on all furniture's legs is highly recommended.
- Remember that area rugs will create an uneven colour variation due to the uneven exposure to sunlight.
- Rolling furniture should have soft rubber rollers (type W) in accordance with DIN 12529.
- Use a protective mat to protect areas around office chairs.







Felt Pads

GUARD

FLOOR

GUARD

FLOOR





#### C: MAINTENANCE

- At all times, the indoor environment must maintain a temperature range of 18°C(65°F) to 29°C(85°F) and a humidity range of 40% to 70%.
- Do not drag heavy objects or furniture across the floor. When moving appliances or furniture, lay a protective item such as cardboard and walk the heavy item across carefully.
- Place dirt-absorbing mats at exterior doors to reduce dirt and sand on the floor.

NOTES:	







#### Part 4 Product Warranty

#### A: 30 YEAR LIMITED RESIDENTIAL WEAR WARRANTY

• EC Premium - AquaFix warrants that the decor layer underneath the top wear layer will not wear through under normal residential traffic and usage for 30 years from the purchase date.

#### **B: LIMITED COMMERCIAL WEAR WARRANTY**

Light Commercial	High Traffic Commercial
15 YEARS	10 YEARS

- EC Premium AquaFix warrants that the decor layer underneath the top wear layer will not wear through in the light commercial application. (e.g. salon, clinic, or boutique).
- Food court, supermarket, industrial zone, or entrance, the hallway of business office considers a high traffic commercial application.

#### C: FILING A CLAIM

- · Copy of the original purchase receipt must be submitted to the original dealer.
- · Coordinate with inspection appointments set by dealer and distribution.
- · A minimum of five full planks must be kept for testing purposes.
- EC Premium AquaFix only accepts claims of defective products, with over 10% of the total quantity
  of products during the warranty covered period. Customers can claim the same quantity as defect
  quantity with the same or similar products. But, in case a specific product has been discontinued, a
  similar product or portion of the original purchase value, which is equivalent to the defect quantity,
  can be refunded to the original purchaser.
- All claims must be submitted and approved by the distributor before replacing or repairing; otherwise, all manufacturer warranties will be void. EC Premium AquaFix reserves the right to inspect the affected floor prior to repair or replacement.

#### D: WARRANTY EXCLUSIONS

- · All installations must be performed following the EC Premium AquaFix installation manual.
- Proper care and maintenance must be performed under the EC Premium AquaFix maintenance instructions.
- The surface sheen reduction is a natural aging of products and is not considered a defect of surface wear.
- Any damage caused by chemical spills, water leakage, surface scratches, cutting, fire, high-heel shoe marks, scuffing, squeaking, chipping, excess dryness, moisture, or abuse of any kind is not covered by warranty.









- Dents or other damage caused by rolling or moving excessively heavy items or loads across the floor.
- Damage from subfloor leveling, squeaks, bounce, deflections exceeding 1.1mm or 3/64".
- Labour cost is not covered by this warranty.
- EC Premium AquaFix is not responsible for the expansion and contraction of panels due to any improper temperature or moisture control, direct sunlight exposures, and overheating by electronic devices.
- EC Premium AquaFix accepts no responsibility for any problems arising from pets, insects, or microorganisms.
- All surface wear on transitions or stair nosings is not covered by this warranty.
- Installation of products that are not compliant with radiant heat will void the warranty.
- The products' warranty is not transferable and is limited to the original purchaser only.
- Under flooring industry standards, 5% of industrial defects out of the total quantity of products is allowed. As a result, 10% of wastage during any installation should be calculated before installation is performed.
- Any defective piece found before installation should not be installed; once products are installed,
  they will be deemed to have been accepted by the customer. It is the responsibility of the installer
  and the homeowner to inspect products defects before installation. EC Premium AquaFix accepts
  no liability for any labour cost or related expenses incurred to replace the product that has been
  installed with evident and visible defects.
- Excessive wear caused by subfloor telegraph/unevenness, deflections are not covered by this warranty.
- The British Columbia provincial law governs this Limited Warranty set above. EC Premium Aqua-Fix assumes no liability for incidental or consequential damages arising from the product's use or non-use.
- Products sold as is; auction goods, discontinued/off the rack, or indirect trades by unauthorized dealer/individual are not covered by the manufacturer warranty.
- Failure of providing the original purchasing invoice from Unifloor Trading Inc. will void warranty.
- Under no circumstances will the value of a warranty claim exceed the original purchase price of the product.

There are no other extended warranties except statements set above.







# **EAQUAFIX®**